



1. Navigate to **Composer > Demand**. Click **New** on the left sidebar to create a new Demand campaign.

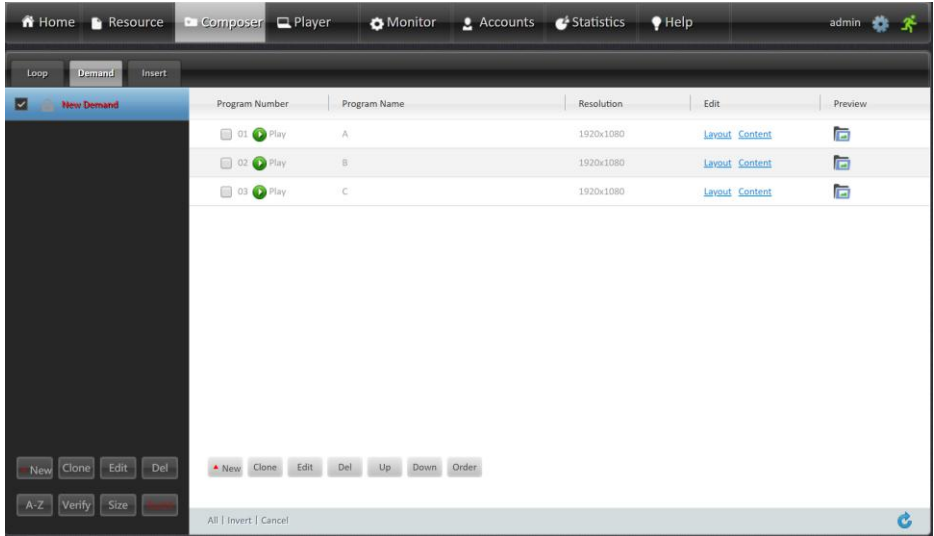

Click **New** in the white area to create programs. These programs will be triggered to play by an external device.

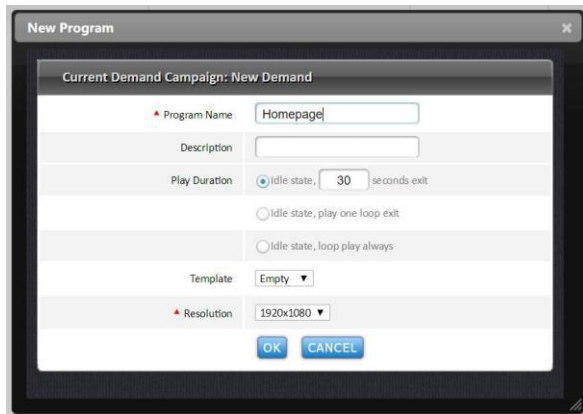

**Play Duration:** Specify how will the triggered program go back to the previous program.

Program Number	Program Name	Resolution	Edit	Preview
01  Play	A	1920x1080	<a href="#">Layout</a> <a href="#">Content</a>	


**Play/Pause:** Enable or suspend a program.

**Layout:** Edit the display layout of the program.

**Content:** Add content into the program.

**Preview:** Preview the display effect of the program.

2. Select **Layout** and use the buttons on the right side to add content areas into the layout.

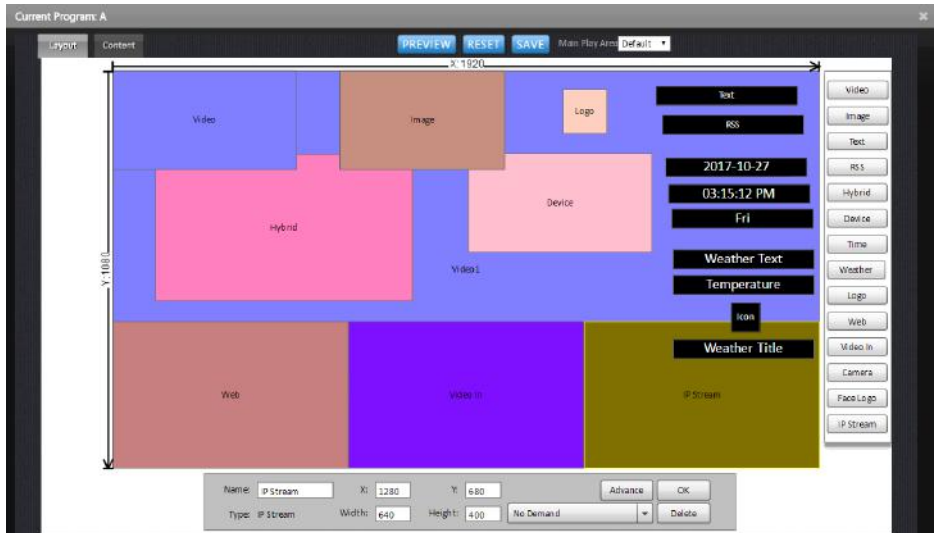

Click and drag to move and resize an area. Right click on an area or use the tools at the bottom for more settings.

Click **OK** at the bottom to save each step. Click **SAVE** at the top to save the layout when finished.

Name:	<input type="text" value="Text"/>	X:	<input type="text" value="0"/>	Y:	<input type="text" value="0"/>	<input type="button" value="Advance"/>	<input type="button" value="OK"/>
Type:	Text	Width:	<input type="text" value="384"/>	Height:	<input type="text" value="53"/>	<input type="text" value="No Demand"/>	<input type="button" value="Delete"/>

**Advance:** Specify the advanced properties of the selected area.

**No Demand:** (optional) Specify the area's interactive effect.

**No Demand:** No interactive effect.

**Start APP:** When the area is triggered, the whole screen will switch to a third-party Android application.

**Slide [With OSD Arrows]:** Enable image slides with On-Screen-Display arrows on the selected image area.

**Slide [No OSD Arrows]:** Enable image slides without On-Screen-Display arrows.


**Full Screen:** When triggered, it will display in full screen.

**Back:** When triggered, the whole screen will switch to the previous program.

**Exit:** When triggered, the whole screen will switch to the Loop campaign.

**Play: Program Name:** When triggered, the whole screen will switch to the selected program.

3. Select **Content** and click on an area to add content.

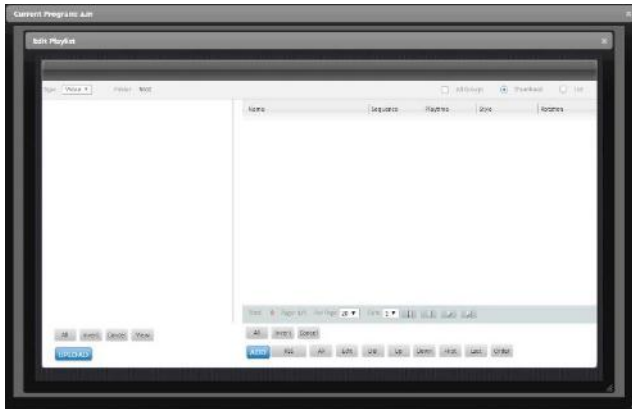

Click **UPLOAD** to browse and upload files. Click **ADD** to add files into the playlist of the area. Files in the playlist will play in order. Use the **Edit** button at the bottom for more settings. Close the window when you're done.

4. Select **Preview** to see the display effect. Check the Loop campaign and click **Audit** at the bottom.

